User's guide for MT-ESP1000



ACCELERATION SLIP REGULATION: ASR ANTI-LOCK BRAKE SYSTEM: ABS ELECTRONIC STABILITY PROGRAM: ESP





| 1. | USER A | | 5 - |
|------|--------|---------------------------------------|------|
| 1.1. | INSTAL | LATION AND SET-UP | 5 - |
| 1.2. | USER I | NSTRUCTIONS | 7 - |
| 1.3. | Using | THE SIMULATOR | 8 - |
| | 1.3.1. | Overall view | 8 - |
| 1.4. | MEASU | JREMENT SOCKET PANEL | 8 - |
| 1.5. | Hydra | ULIC SYSTEM VIEW (RIGHT SCREEN) | 10 - |
| 1.6. | MAIN | SCREEN (LEFT SCREEN) | 11 - |
| 1.7. | Softw | 'ARE | 16 - |
| | 1.7.1. | Exxograph | 16 - |
| | 1.7.2. | Installing Exxograph | 16 - |
| | 1.7.3. | Analysing a record | 18 - |
| | 1.7.4. | Installing the Reflet program | 21 - |
| | 1.7.5. | Installing the EXXOTEST device driver | 23 - |
| | 1.7.6. | Connecting to the model | 25 - |
| | | | |



1. USER AND INSTRUCTION MANUAL

1.1. Installation and set-up

Separate model components

The steering wheel unit screws onto the front of the simulator.



Steering wheel unit attachment

The wiring harness plugs into the front of the model, at the bottom (white connector).

The pedal unit (brake and accelerator) are placed on the floor below the steering wheel unit, as in a vehicle. Use the harness supplied to connect the pedal unit to the rear of the model.



Pedal unit: brake + accelerator

Pedal unit harness



Connect the 230 V mains power cord to the rear of the model. Flick the switch to position I.



Rear of model

Press the ON/OFF button once on the front panel.



On/Off button

The PC included in the model boots up, activating the screens.

Model MT-ESP1000 has no moving parts. The various actions are illustrated on each screen in real time, in direct connection with the electrical signals (measurement sockets).



1.2. User instructions

Environment

Learning model MT-ESP1000 can be placed on a bench if you do not have the optional MT-TABLE. It must be installed in a dry place away from dust, steam and combustion fumes.

The machine requires approximately 400–500 lux of light.

The machine may be placed in a practical exercise room. Its operating noise level does not exceed 70 decibels. The simulator is protected against potential user error.

Calibrating and maintaining model MT-ESP1000

Calibration: factory setting. Maintenance frequency: none. Cleaning: use a very soft, clean cloth with a window cleaning product.

Number of work stations and position of user

Model MT-ESP1000 is a single work station. The model user will stand throughout the practical exercise.

Lockout/Tagout procedure

- Close the applications on the touch screen.
- Switch off the PC: Start menu, Power off.
- > Touch one of the screens to check that the PC is not just sleeping.
- Flick the switch to 0 on the rear of the simulator
- Unplug the 230V power supply cord.
- > Check there is no power by pressing the black PC on/off button next to the instrument cluster.
- Check that the rear covers are fitted.
- Store model MT-ESP1000 in a secure room while out of use.

Residual risk

The trainer is the only person authorised to access the rear of the model. For the entire duration of the practical session, the trainee shall work on the front of the model.

Transporting model MT-ESP1000

The model must be switched off and disconnected before transport. At least two people, using the handles provided, are required to carry the model.

The model should only be opened by certified and authorised persons.





1.3. Using the simulator

1.3.1. Overall view



1.4. Measurement socket panel







- 3- 12V power outputs
- 4- Pump control

Various signals are conveyed via the HS (High Speed InterSystem) CAN:

- steering angle, tri-sensor information (yaw sensor and accelerometer sensors), wheel speeds, etc. Control signals relating to the instrument cluster in particular are conveyed via the LS (Low Speed Comfort) CAN.

The ground and the +12V are useful as reference points for measurements.

The pump control socket gives the control signal, not the power signal.

Wheel speed sensors:

Blue terminals: Analog ground

Green terminals: Magnetoresistive sensor signals







USV1 – Switch-over solenoid valve 1 2 EV1 – Front left intake solenoid valve 3 EV2 – Rear right intake solenoid valve 4 HSV1 – HP suction solenoid valve 5 AV1 – Front left exhaust solenoid valve 6 AV2 – Rear right exhaust solenoid valve 7 USV2 – Switch-over solenoid valve 8 EV3 – Rear left intake solenoid valve EV4 – Front right intake solenoid valve 9 10 HSV2 – HP suction solenoid valve 11 AV3 – Rear left exhaust solenoid valve 12 AV4 – Front right exhaust solenoid valve

Solenoid valve control signals

1.5. Hydraulic system view (right screen)

This screen provides a view of the hydraulic system only. The setup changes according to whether the advanced driver assistance systems are on or off. The functions of the various buttons are detailed below.



Hydraulic system viewing screen (right screen) The solenoid valves are numbered from 1 to 12; these numbers match those of the socket panel.





Hold a finger on the area to be zoomed in on. This enlarges the image. Tap the screen briefly to return to the initial setting.



To rotate about an object, tap this key then slide a finger on the screen in the required direction. Tap the screen briefly to reset.



Slide a finger on the screen to move. Tap the screen briefly to reset.



Switch to ISO mode (schematic view)

Button to switch the schematic view on/off.

1.6. Main screen (left screen)

View of the vehicle, turns, settings, etc. Changes to the vehicle view, choice of grip, choice of trip, etc.

Selecting the driver assistance mode



ESP electronic stability program on/off (if ESP is on, ABS and ASR are also on)



ASR acceleration slip regulation on/off (if ASR is on, ABS is also on)



ABS anti-lock brake system on/off





Main screen (left screen)

Road grip conditions



The dry road setting simulates a pavement with a grip coefficient of 0.85.



The wet road setting simulates a pavement with a grip coefficient of 0.55, which corresponds to a damp pavement (without specific rain-related phenomena, such as aquaplaning, etc.).



The snow setting simulates a grip coefficient of 0.25.





Asymmetric grip

The asymmetric grip setting puts snow on one side of the road on certain portions. It is compatible with the other grip options.



Adds patches of ice (grip 0.15) at various points. Compatible with the other grip conditions.

Start position



Switch from one start position to another. There are over ten possible start positions (loops with a radius of 100 m and 200 m, circuit with different start points, hill climbs and straights with the possibility of activating asymmetric grip). This option is very useful for repeating a scenario with the same or different settings.

Recording and playback module





The vehicle must be running to start recording. Press the button to start recording. The button is red while recording is in progress. Press again to stop recording.

A file is generated automatically on the simulator at the end of recording. If there is an SD card in the reader, the recorded measurements are saved on this card. This data can be processed using Exxograph on another PC.

WARNING: The data cannot be exported later. If there is no SD card in the reader, the data is lost. The files are saved in the .dat format in the C:\data folder.



The recordings on the model can be viewed. These functions offer detailed access.







Running speed



This option is available in playback and driving modes.

<u>Beware:</u> In driving mode, it should be considered that running in slow motion calls for slower driver movements than at normal speed. Regulating is significantly different too. This mode nonetheless serves a purpose as it can be used to highlight driving conditions that are difficult to perform at real speed (especially avoidance manoeuvres).

Graph management



Graph management menu

The first button switches the graph display on and off. It can therefore be used to switch the driving window to almost full-screen mode.

The Start button starts dynamic graph plotting while in driving mode. The curves to be plotted can be selected by checking the corresponding boxes (see figures below). The Stop button stops dynamic plotting.

Ray. trajectoire voulue 104 m

| Entrées, volonté conducteur | | | Acc | éleromètre/Capteur de lace | t, | |
|-----------------------------|-----|--------|------------|----------------------------|------|-------|
| Pédale accélerateur | 0 | % | 🖌 Vi | tesse lacet | 0.00 | rad/s |
| Pédale frein | 0 | % | 🚺 vi | tesse lacet cible | 0.00 | rad/s |
| Angle volant | -21 | 0 | vi | tesse latérale | 0.00 | m/s |
| Ray. trajectoire voulue | 104 | m | 1 | | 0.00 | |
| Ray, trajectoire réelle | 105 | m | Vi Vi | tesse latérale cible | 0.00 | m/s |
| Capteurs de vitesse | | | Sor | ties, régulation | | |
| Vitesse avant droit | 0 | km/h | Fr Fr | ein avant droit | 0 | % |
| Vitesse avant gauche | 0 | km/h | F r | ein avant gauche | 0 | % |
| Vitesse arrière droit | 0 | km/h | F r | ein arrière droit | 0 | % |
| Vitesse arrière gauche | 0 | km/h | Fr | ein arrière gauche | 0 | % |
| Vitesse véhicule | 0 | km/h 🥈 | Re | egulation Injection | 0 | % |

Vehicle information, Driver's intended path, Accelerometer/Yaw sensor, Speed sensors, Brake outputs, etc. Uncheck the boxes to disable the plotting of the respective curves.





Vehicle view field

Tap the vehicle on the touch screen for a choice of vehicle views.



View from behind vehicle

Side view



Overhead view





Interior view





Two-dimensional information is displayed in the top right corner.



2D indicator

1.7. Software

1.7.1. Exxograph

The MT-ESP1000 simulator offers the possibility of exporting measurement data. When recording is stopped, the data is automatically saved as an .asc file on the card in the ESP simulator card reader.

The card reader is compatible with the SD-card format.

Exxograph is an application that decodes frame records. It can read the trace files exported from the MT-ESP simulator which are saved in a compatible format.

1.7.2. Installing Exxograph

Exxograph is part of the MuxUtilities package supplied on the CD accompanying the model. Install MuxUtilities.

A licence supplied in the form of a USB dongle with the MT-ESP simulator must be used. This dongle provides access to all Exxograph functions (including manufacturers' database support, etc.).

From the CD-Rom provided or from the version downloaded from your customer space at www.exxotest.com,

run the 'EXXOGraph_Setup_----.exe' application.





2. In the following 'Destination folder', 'Start menu', 'Create desktop shortcut' steps, *click Next, then Install and finally Done.*

3. You will find a section describing the use of EXXOGraph in the Reflet instructions.





1.7.3. Analysing a record

Run Exxograph, then select File, New analysis Load a trace file (.asc) and a database (.dbc) in the new window: Select the trace file:

- Click +
- Open the desired .asc file (a sample file is provided on the CD)
- Select the database:
- Click +
- Load file BaseESP.dbc supplied on the CD.

| EXXOGraph v 2.04 | | | |
|---------------------------|--------------------------|----------------------------|--|
| hier Affichage Outis Aide | | | |
| Nouvelle analyse (1) | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | (| | |
| | Nouvelle analyse (1) | | |
| | -Rohiers de traces | Bases de domites | |
| | +- | ÷= | |
| | B: 100625_164402_esp.asc | DesetSP.08C | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | (and one) (Manufacture) | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Once the files have been selected, confirm by clicking OK.

Selecting the parameters to be analysed

The following window proposes all the database settings grouped into frames. Select the parameters to be studied (double-click or select them and click +).

| Trier par nom | • • |
|--|--|
| BaseESP.DBC C Second Stress | ACCELERATION_AV_DROIT ACCELERATION_AV_GAUCH AVI AVI PEDALE_FREIN PEDALE_FREIN PRESSION_AV_DROIT PRESSION_AV_DROIT PRESSION_AV_DROIT PRESSION_AV_GAUCH VITESSE VEHICULE |
| () | |

Signal preselection

By default, you can select them all and sort them later.



Viewing the signals

To zoom, place the cursor near the part to be viewed and use the mouse wheel.

Alternatively, place the cursor at the beginning of the period to be studied, and then click and drag to the end of the period.

Click Zoom, then "Zoom between the cursors" to zoom in on the greyed section.



Selecting signals

The "List of signals" label (top left) is used to readjust the selection of curves to be viewed without leaving the analysis.



Displayed signal selection



Exporting to Excel

For a more detailed analysis, the data can be exported to Excel using the Export/Export CSV function. Choose a step of 100 ms and a precision of 100.

| Export CSV | | | | | |
|--|---|---|--------------|------------------------------------|---------|
| VITESSE_AR_DROIT VITESSE_AR_GAUCH VITESSE_AV_DROIT VITESSE_AV_GAUCH VITESSE_AV_GAUCH VITESSE_LATERALE_CIBLE VITESSE_LATERALE_CIBLE | Séparate Sélectio Début Fin Pas | ur CSV ; ver zoom 25000 38000 100 | ms 💌 ms 💌 | Nombres Séparateur Précision | , 100 📚 |
| | | a enregistrements ger | | Exporter (| Annuler |

Export window

The data is exported in a .csv format which can be imported directly into Excel. To plot a graph, simply add a time column with the same 100 ms step.





1.7.4. Installing the Reflet program

Run the 'RefletInstall.exe' application from the CD-Rom provided or from the version downloaded from your customer area at <u>WWW.exxotest.com</u>.

| | Nom | Taille | Туре 🔺 |
|---------------|---|-----------|---------------------|
| | Driver | | Dossier de fichiers |
| | didactique_driver_Setup_20130710_105857.exe | 1 542 Ko | Application |
| _ | T EXXOGraph_Setup_20130614_121148(2.09).exe | 3 931 Ko | Application |
| \Rightarrow | 📆 RefletInstall.exe | 33 813 Ko | Application |

The installation/updating operation will then proceed as follows:

| Choose the installation wizard language: click OK. | Langue de l'assistant d'installation Veuillez sélectionner la langue qui sera utilisée par l'assistant d'installation : Français OK Annuler |
|---|--|
| Installation wizard welcome screen: click Next. | Bienvenue dans l'assistant d'installation de Reflet 8 Cet assistant va vous guider dans l'installation de Reflet 8.35 sur votre ordinateur. |
| Choose the folder where Reflet is to be installed: | avant de continuer. Appuyez sur Suivant pour continuer ou sur Annuler pour abandonner l'installation. Installation - Reflet 8 Dossier de destination Où Reflet 8 doit-il être installé ? |
| click Next. | L'assistant va installer Reflet 8 dans le dossier suivant. Pour continuer, appuyez sur Suivant. Si vous souhaitez choisir un dossier différent, appuyez sur Parcourir C:l'Program Files\Reflet 8 Parcourir Le programme requiert au moins 61,3 Mio d'espace disque disponible. |







11. Accept the installation of the C++ module: click Yes.

| ñ | Installation - Reflet 8 | |
|---|---|-------|
| | Installation en cours Veuillez patienter pendant que l'assistant installe Reflet 8 sur votre ordinateur. | |
| | Finalisation de l'Installation | |
| | | |
| | Microsoft Visual C++ 2005 SP1 Redistributat | |
| | Please read the following license agreement. Press the PAGE DOWN key to see the rest of the agreement. | |
| | MICROSOFT SOFTWARE LICENSE TERMS MICROSOFT VISUAL C++ 2005 RUNTIME LIBRARIES These license terms are an agreement between Microsoft Corporation (or based on where you live, one of its affiliates) and you. Please read them. They apply to the software named above, which includes the media on which you received it, if any. The terms also apply to any Microsoft " updates. | |
| | * supplements, * Internet-based services, and * support services for this software, unless other terms accompany those items. If so, those terms apply. By using the software, you accept these terms. If you do not accept | iuser |
| | , Do you accept all of the terms of the preceding License Agreement? If you choose No, Install will close. To install you must accept this agreement. | |
| | Yes No | |

1.7.5. Installing the EXXOTEST device driver

12. Choose the installation wizard language: click OK.

13. Installation wizard welcome screen: click Next.

| Langue de l'assi | stant d'installation 🛛 🕞 🔀 | | | | |
|--|--|--|--|--|--|
| Veuillez sélectionner la langue qui sera utilisée par l'assistant d'installation : | | | | | |
| Français | ✓ | | | | |
| | OK Annuler | | | | |
| 1 ³ Installation - Exxotest-Didactique Driver setup Image: Constraint of the setup Image: Constraint of the setup Bienvenue dans l'assistant d'installation de Exxotest-Didactique Driver setup | | | | | |
| | Cele assant e vous guiaer dans in scaladori de Ecolotest-Didactique Driver setup 2.5.3.0 sur votre ordinateur. Il est recommandé de fermer toutes les applications actives avant de continuer. Cliquez sur Suivant pour continuer ou sur Annuler pour abandonner l'installation. | | | | |
| | Suivant > Annuler | | | | |

ABS, ASR, ESP



14. Choose the folder where the driver is to be installed: click Next.

15. Installation ready to begin: click Install

Installing: Wait a few minutes...

16. Installation complete: click Done







17. Reflet and the driver are now installed.Click OK, then Done.

18. The computer may need to be rebooted to finish loading the new driver.

19. It is also advisable to install EXXOGRAPH now.

1.7.6. Connecting to the model

Connect model MT-ESP1000 to the computer via the USB cable.



MT-ESP1000 USB port

You will find further information in our Reflet instruction manual supplied with the model or in the Download area of our website <u>www.exxotest.com</u>

$\mathsf{C}\mathsf{E}_{\mathsf{DECLARATION}\,\mathsf{OF}\,\mathsf{CONFORMITY}}$



| Manufacturer | Name: | ANNECY ELECTRONIQUE SAS |
|--------------|----------|-------------------------------|
| | Street: | 1, rue Callisto - Parc Altaïs |
| | Town: | 74650 CHAVANOD |
| | Country: | France |

Represented by the signatory below, declares that the following product:

| Product reference | Description | Make |
|-------------------|---|----------|
| MT-ESP1000 | 3D Benchtop Learning Model – Vehicle Stability Control: ABS, ASR and ESP | EXXOTEST |

complies with all requirements of European directives relating to the design of Electrical & Electronic Equipment (EEE) and the management of Waste Electrical & Electronic Equipment (WEEE) in the EU:

- Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE)
- Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS)
- Electromagnetic Compatibility Directive 2004/108/EC of the European Parliament and of the Council of 15 December 2004.

The product has been manufactured in accordance with the requirements of European directive:

• Directive 2006/95/EC of the European Parliament and of the Council of 12 December 2006 on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits.

Signed in Chavanod on 20 July 2015

Stéphane Sorlin, Chairman







ace





Téléchargements

Original Instructions

Document No. 00309358-V1

ANNECY ELECTRONIQUE, Designer and Manufacturer of Exxotest and Navylec equipment Parc Altaïs, 1 rue Callisto, F-74650 CHAVANOD. Tel. +33 (0)4 50 02 34 34 – Fax: +33 (0)4 50 68 58 93 RC ANNECY 80 B 243 – SIRET 320 140 619 00042 – APE 2651B – VAT No. FR 37 320 140 619 ISO 9001:2008 FQA No. 40001142 by L.R.Q.A.